



# Cargo Protectors, Inc.

*"a brand as secure as our products"*

3685 Quail Road NE. Suite 100, Sauk Rapids, MN 56379


320-202-6567 1-800-728-3038 Fax: 320-202-7792

[sales@cargoprotectors.com](mailto:sales@cargoprotectors.com) / [www.cargoprotectors.com](http://www.cargoprotectors.com)


## Installation Instructions for HP series Hasp

1. Make sure you have all required hardware, Hasp (both sides), Lock, (6) - 3/8" Carriage Bolts, Nuts and Fender Washers. (Suggested items : Small Vise Grip pliers)
2. Put hasp together as it will be installed on the door/s making sure bottom is level. Place a fender washer between the eyes of the hasp halves (to maintain proper clearance) and clamp together with the small vise grip pliers
3. Using the clamped assembly as a template mark the 6 holes and drill 7/16" holes at the marked locations.
4. Remove Vise Grip pliers
5. Install carriage bolts (length is determined by thickness of mounting surface), with washers and nuts


### HP2000

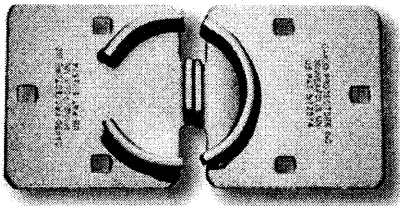


### HP2100

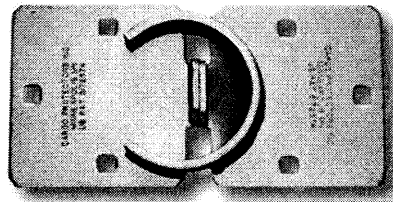

### HP2200

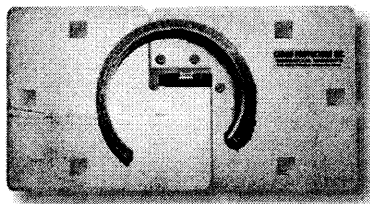

### HP2300

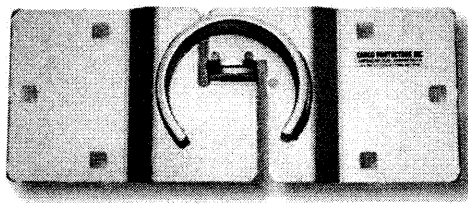

PN	Fits	Case Qty.	Ship Wt. Ea.
HP2000	3 pc ring- no overlap, lock access from side	14	3.5 #
HP2100	1 pc ring - overlaps, lock access from side	14	3.5 #
HP2200	1 pc ring - overlaps, lock access from bottom 3 holes to mount CP2170	14	3.5 #
HP2300	1 pc ring - overlaps, lock access from bottom 3 holes to mount CP2170 - Raised center section to accommodate weather stripping and trim	14	3.5#