



## Cargo Protectors, Inc.

*"a brand as secure as our products"*

3685 Quail Road NE. Suite 100, Sauk Rapids, MN 56379


320-202-6567 1-800-728-3038 Fax: 320-202-7792

[sales@cargoprotectors.com](mailto:sales@cargoprotectors.com) / [www.cargoprotectors.com](http://www.cargoprotectors.com)

### Installation Instructions for S/SL series Hasp

1. Make sure you have all required hardware, Hasp (both sides), Lock, (6) - 3/8" Carriage Bolts, Nuts and Fender Washers. (Suggested items : Small Vise Grip pliers)
2. SL100 – requires (4) – 5/16" Carriage Bolts, Nuts and Fender Washers.
3. Put hasp together as it will be installed on the door/s making sure bottom is level. Place a fender washer between the eyes of the hasp halves (to maintain proper clearance) and clamp together with the small vise grip pliers
4. Using the clamped assembly as a template mark the 6 holes and drill 7/16" holes at the marked locations.
5. Remove Vise Grip pliers
6. Install carriage bolts (length is determined by thickness of mounting surface), with washers and nuts

**HIGH SECURITY FOR VANS • VENDING  
MACHINES • FREEZERS & SHEDS/CELLAR DOORS**

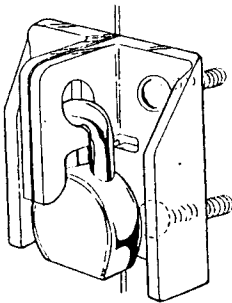


**TOTAL METAL STAMPING, HEAT TREATED**

**SL 100**

**Cargo Protectors, Inc.**

Minneapolis, MN 55405

**HIGH SECURITY FOR VANS • VENDING  
MACHINES • FREEZERS & SHEDS/CELLAR DOORS**

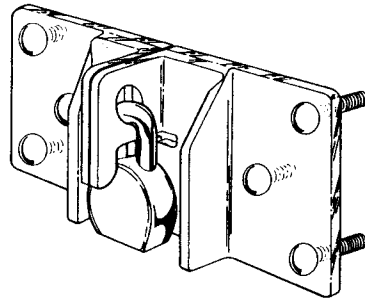

**TOTAL METAL STAMPING, HEAT TREATED**

**SLX 100**

**Cargo Protectors, Inc.**

Minneapolis, MN 55405

